



quickstart

Scan it. Save it. Share it.

Step 1_

Open the battery compartment and insert 2 AAA batteries (included). Turn on your Pocket Reader by pressing the power button for two seconds.

Step 2_

Insert the Pocket Reader CD into the CD-ROM drive of your computer.

Step 3_

Begin by running the brief tutorial. In minutes you can learn how to get the best results from your Pocket Reader. After viewing the tutorial, install the PReader software on your computer.

Step 4_

Register your Pocket Reader today and receive a free incentive. See www.pocketreader.com for details.

Scanning Guidelines

Get the best results from your Pocket Reader by following these guidelines:



Hold the Pocket Reader almost upright and lean on a hard, flat surface.



Beginning slightly ahead of the first word you want to capture, center the line of text within the scanning head area. Drag smoothly from left to right, in a straight line.



Check the Pocket Reader window to see that your line of text has been captured.

Practice Here

Use this handy practice area for your first scan.

Position the Pocket Reader between the horizontal lines. The scanning head should line up with the vertical dotted line. Now press down and drag to the right.

Try scanning this line of text with your Pocket Reader.


Now you can share information more efficiently.

Try scanning this line of text with your Pocket Reader.

Now you can share information more efficiently.



Features of your Pocket Reader

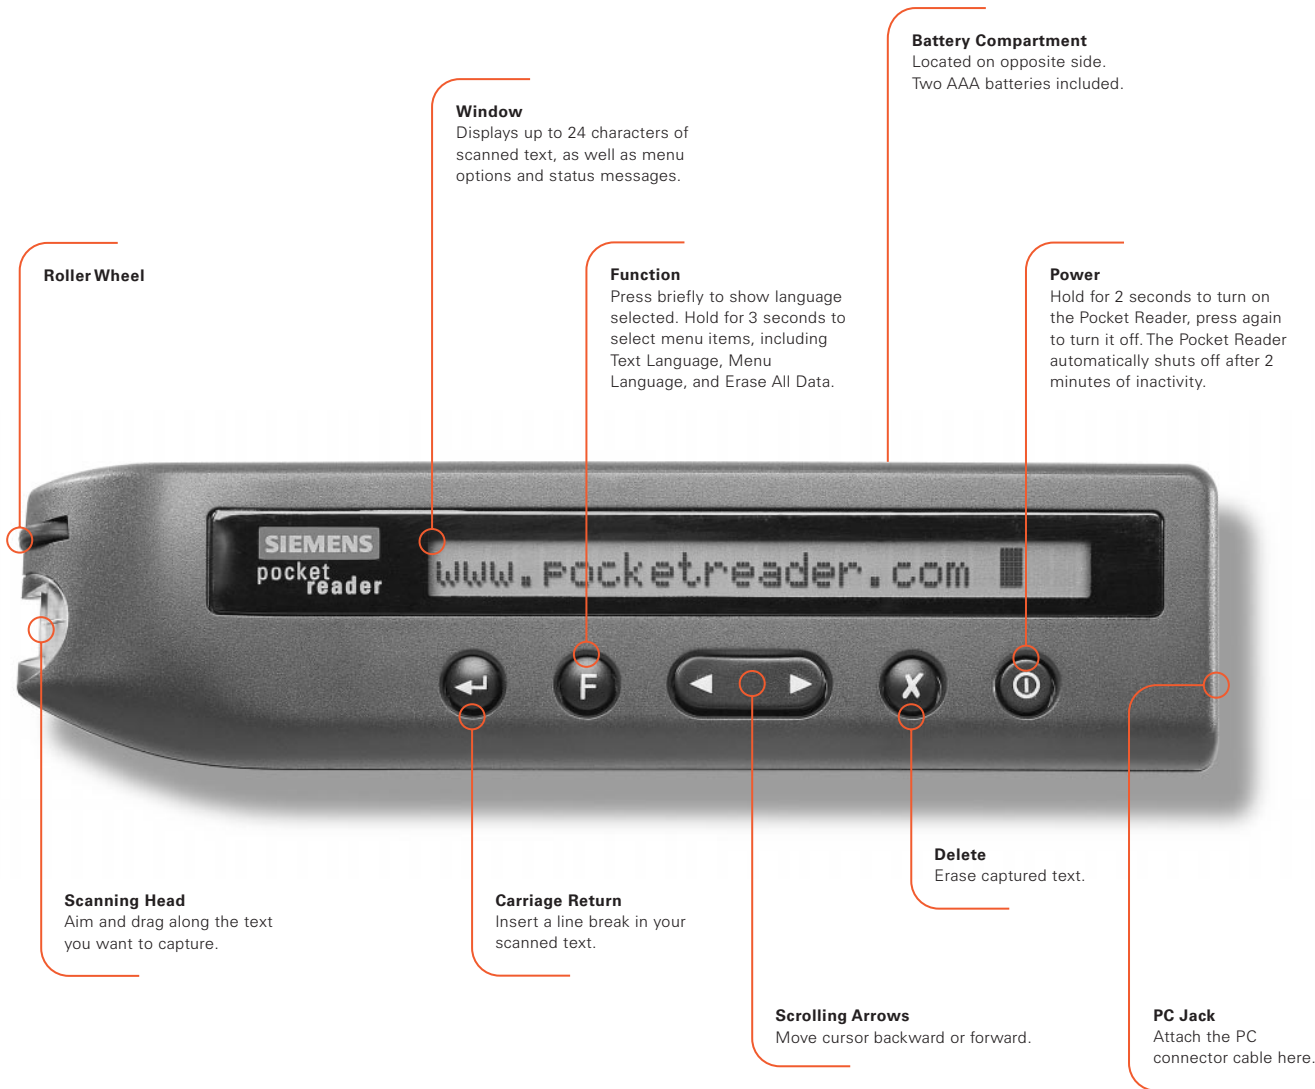

Having Trouble?

“No Line Found” or “Line Lost” error message
Pocket Reader wasn't able to read the line of text. Check to be sure you're holding it almost upright and dragging it smoothly, from left to right, in a straight line.

Missing characters

You may have lifted the Pocket Reader from the page before the end of the line, or Pocket Reader encountered a character it couldn't read.

Garbled text

A variety of reasons, including text color, background patterns, and the condition of the page, could cause an incorrect reading. Please see the Operating Instructions for details.

For Additional Help

Please check the following resources:

- Interactive tutorial on the CD-ROM
- Operating Instructions

Pocket Reader Web site
www.pocketreader.com

Customer Service:
1. 800. 665. 8445

Specifications

Power: 2 AAA batteries for 20 hours of operation

Memory capacity: 40,000 characters (about 20 pages of text)

Scan resolution: 400 dpi

Readable text sizes: 8-16 point

Readable fonts: Sans serif (Helvetica and similar), serif (Times, Courier, and similar)